

Plastic Shed Base Installation Instructions


Step 1.

Select the correct location for your shed ensuring that the ground is level and well compacted. If the ground is soft and uneven, remove the existing top layer and replace with 50 - 75mm crushed hardcore compacted and levelled.




Step 2.

Cover your marked out area with Weed Membrane fixing with Steel U Pins in each corner and one in the centre.

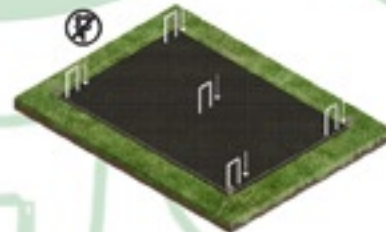


Step 3.

Starting in the top left hand corner of the area, lay the first Plastic Shed Base Panel on the ground so that edges with slots are on the perimeter of the marked out area as shown in the diagram.

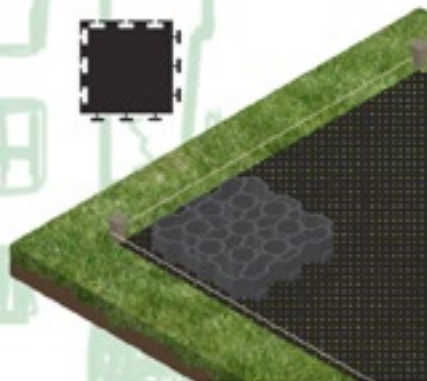


Step 4.

Working from left to right, lay the second panel by placing the slot over the peg. Repeat the laying process working from left to right creating as many rows as necessary ensuring that the slots are laid over the pegs.

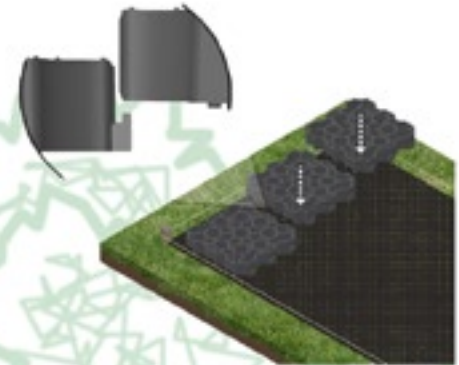

Step 5.

Once the Shed Base area is complete, fill the Shed Base Panels with gravel. This can be done across the whole area or in the just the area that the shed bearers will be sitting on the base. Each Shed Base Panel will require approximately 8 Kilos to fill. Filling the shed base panels with gravel will increase the strength and durability of the base.

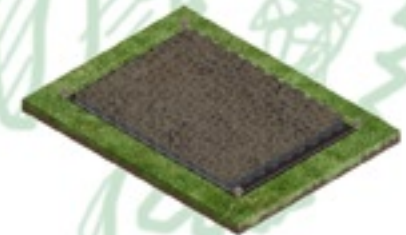

Step 6.

Install your shed onto your newly created Plastic Shed Base.

