

Step 1.




Select an appropriate location for your garden base ensuring that the ground is level and even. If the ground is soft and/or uneven, remove the existing top layer and replace with 50-70mm depth of crushed hardcore, compact and level.

Step 2.

Cover your marked out area with weed membrane and fix with steel uPins or plastic pegs in each corner and one in the centre. Trim the membrane to fit the area if necessary.


Step 3.

Starting in one corner of the area, lay the first garden base panel on the ground so that the edges with slots are on the perimeter of the marked out area as shown in the diagram.

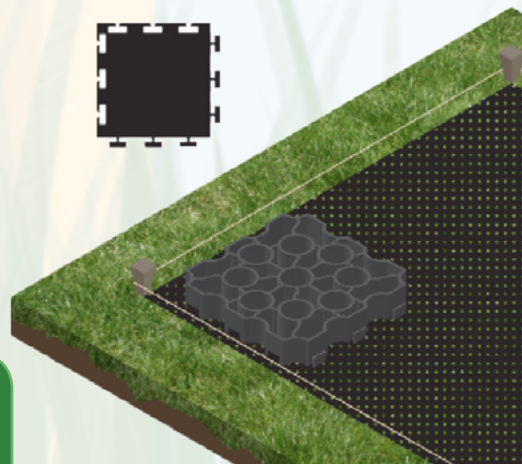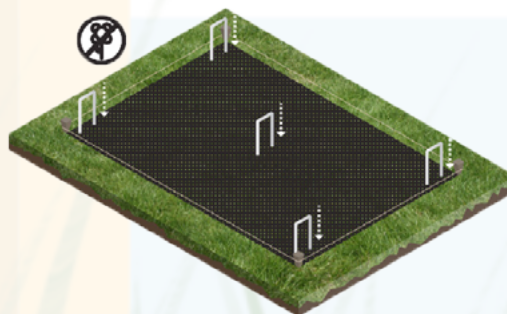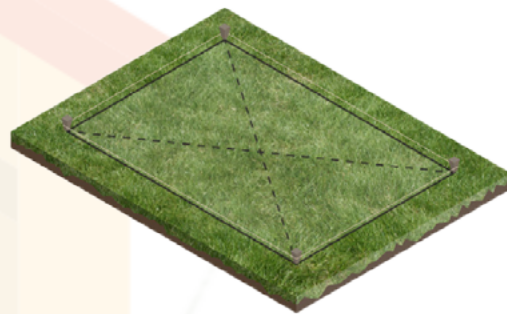


Step 4.

Working from left to right, lay the second panel by placing the slot over the peg. Repeat the laying process working from left to right creating as many rows as necessary ensuring the slots are laid over the pegs.

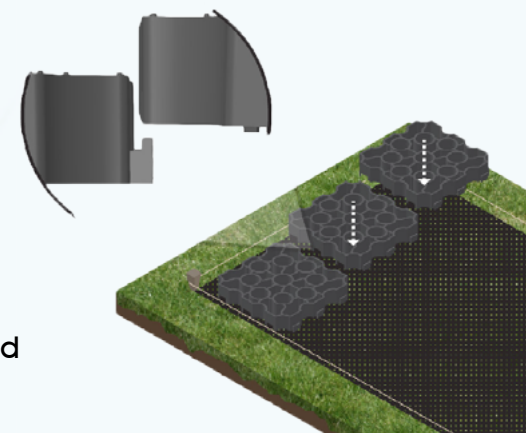


Step 5.

Once the garden base area is complete, fill the panels with gravel. Each panel will take approximately 8kg of gravel to fill. Filling the panels will increase the strength & durability of the base.

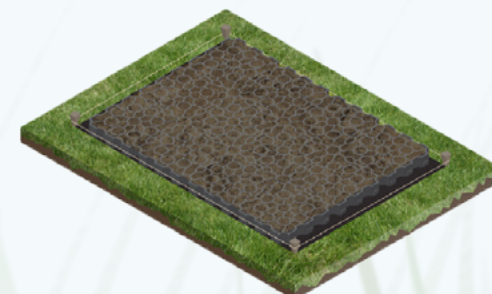

Step 6.

Install your garden building or hot tub on to your newly created garden base.

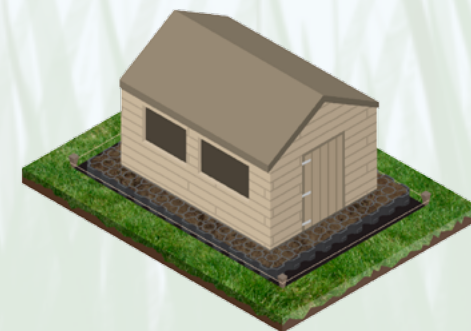

Kits contain:

- X-Grid Garden Base Panels
- Woven Landscape Membrane
- 5x 3mmØ Steel U-Pins